


RIG DRAWER

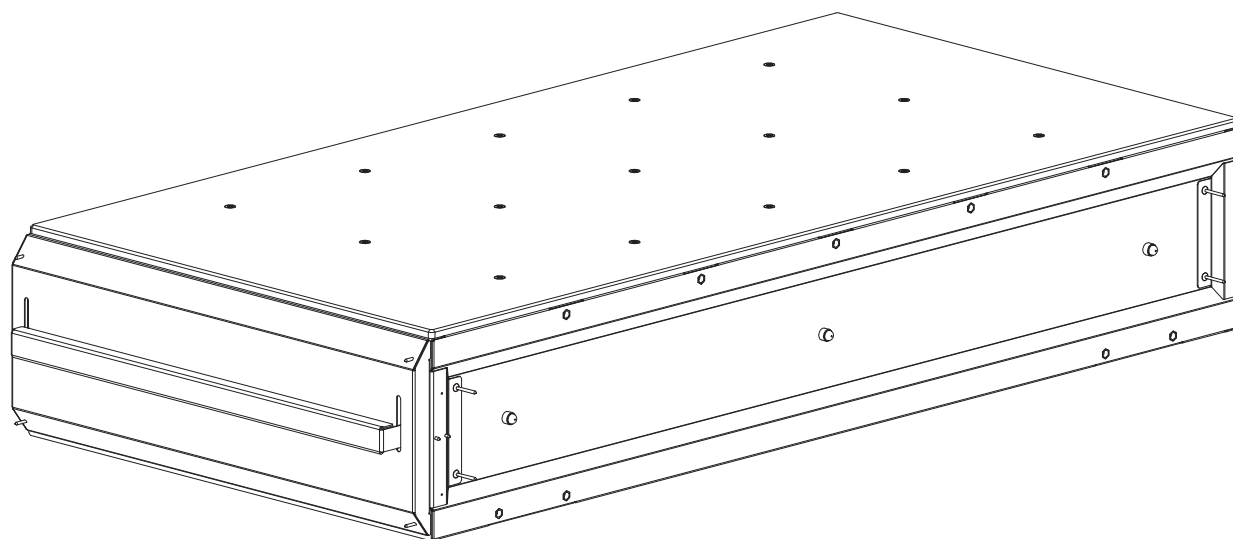

Installation Manual

Manual 15023441_A



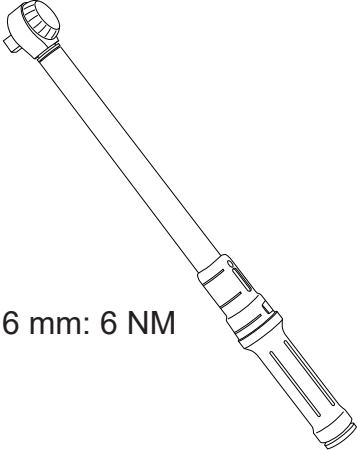
Loyds Industri AS - 2023-12-07

Accepted cars					
Year	Make	Model	Digital/Real	Accepted	Update
2006	VW	Transporter T5	R	2023-08-02	
2020	VW	Transporter T6	R	2023-09-15	
2023	Mercedes	Vito A2	R	2023-10-16	
2016+	Toyota	Proace L1	R	2023-11-15	
2022	VW	ID Buzz Cargo	D		
2023	Toyota	Proace L2	R	2023-12-19	


Revision Record						
Rev nr	Date	Page	Picture	Update	New	Deleted steps
A	2023-12-07				X	




Use colors when printing this installation manual. / Ved utskrift, bruk farger.

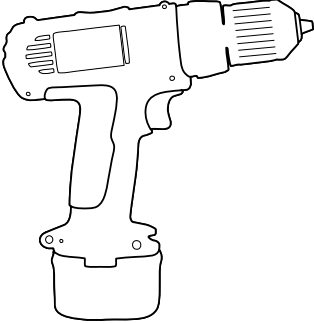Tools		
	 <div>TX30</div>	 <div>6 mm: 6 NM</div>

15024662 Rig Drawer

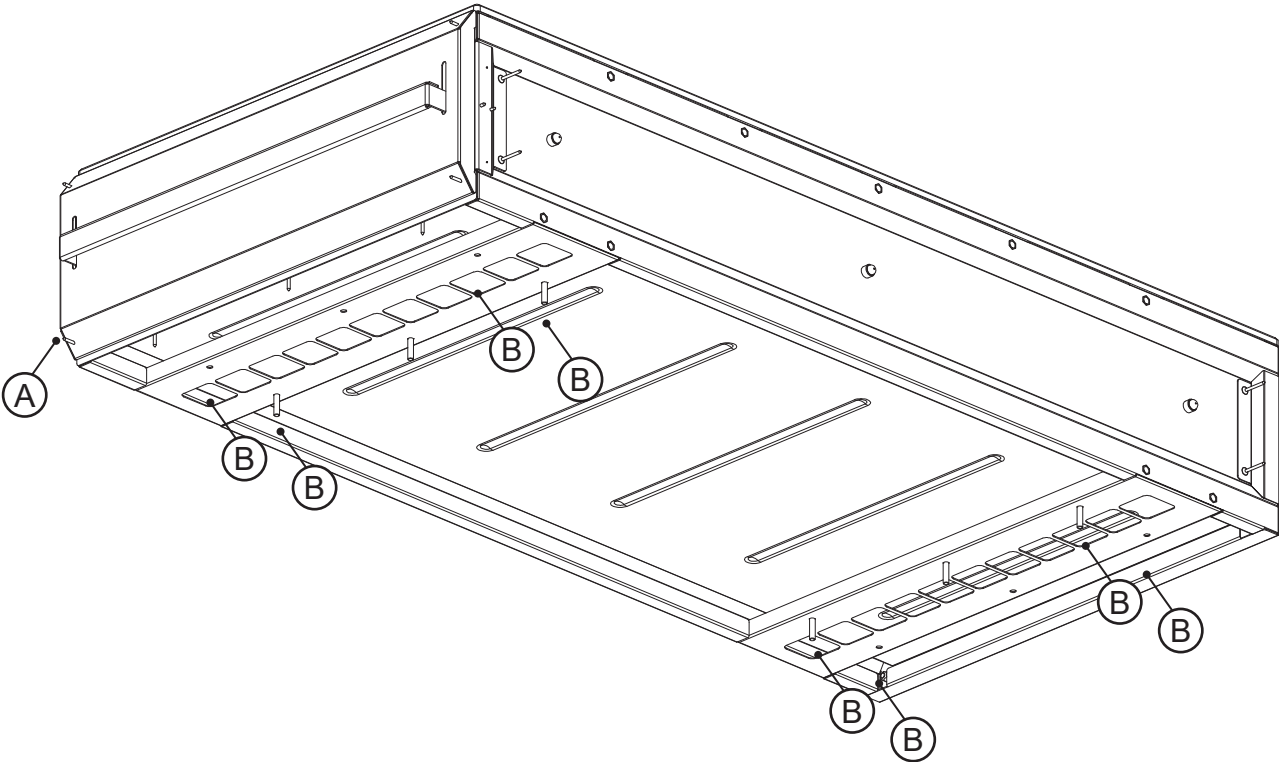


Number	Quantity	Part Number	Definition
A	2	15024662	Rig Drawer Assembly 120x060x022
B	12	15006926	Screw M6x25 Panh Torx Elz (6 pcs. per drawer)

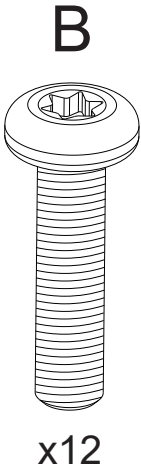



1 BASE (15023380) & PLATFORM FRONT AND REAR MODULE NEEDS TO BE ASSEMBLED IN CAR

Platforms combinations


Front	Rear
900 (15023356)	900 (15023355)
1100 (15023320)	1100 (15023319)
1300 (15023360)	1300 (15023370)

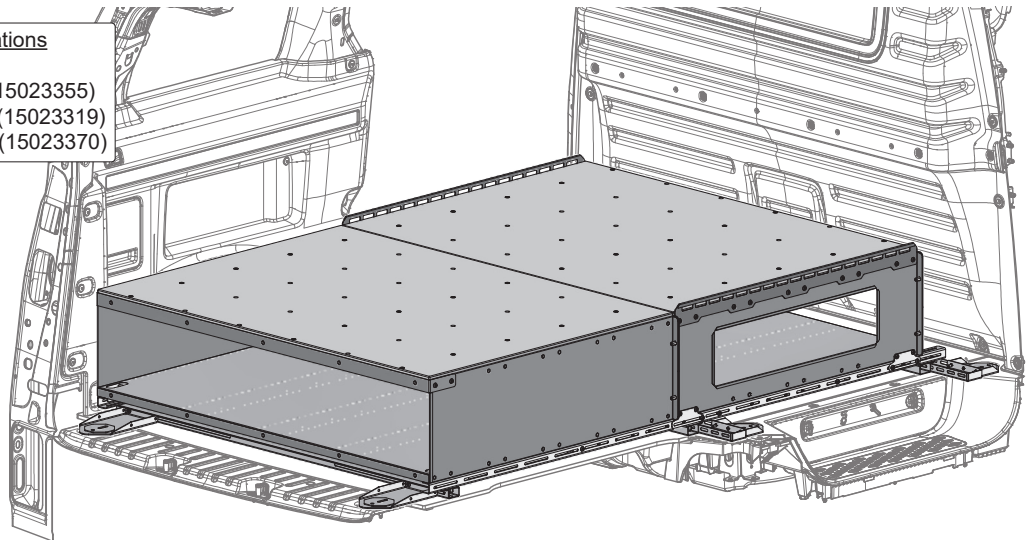


2 REMOVE ALL FLOORBOARDS SCREWS ON BOTH DRAWERS (15024662)

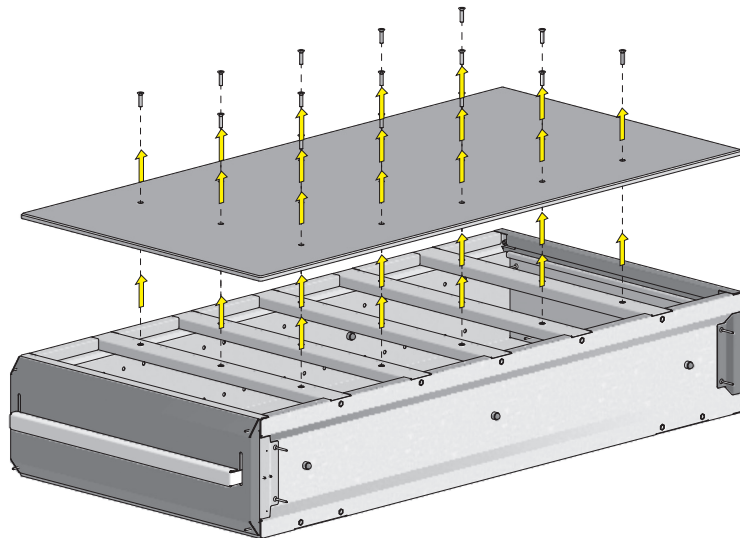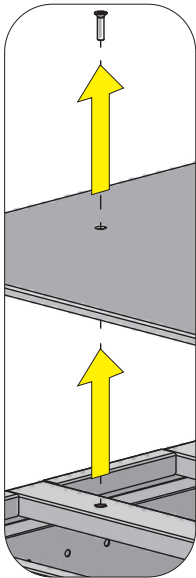


3 CHECK THE POSITION OF THE SCREWS IN THE TRAYS AND REMOVE THE RESPECTIVE SCREWS IN THE PLATFORM. WHERE YOU WANT TO PLACE THE DRAWERS

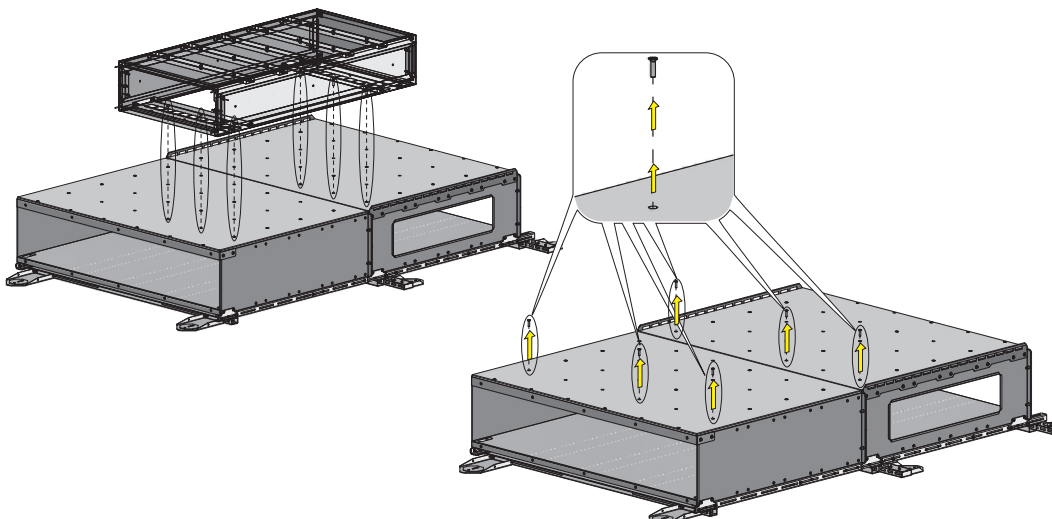


4 DIFFERENT PLACEMENT'S OF DRAWERS ON THE PLATFORM

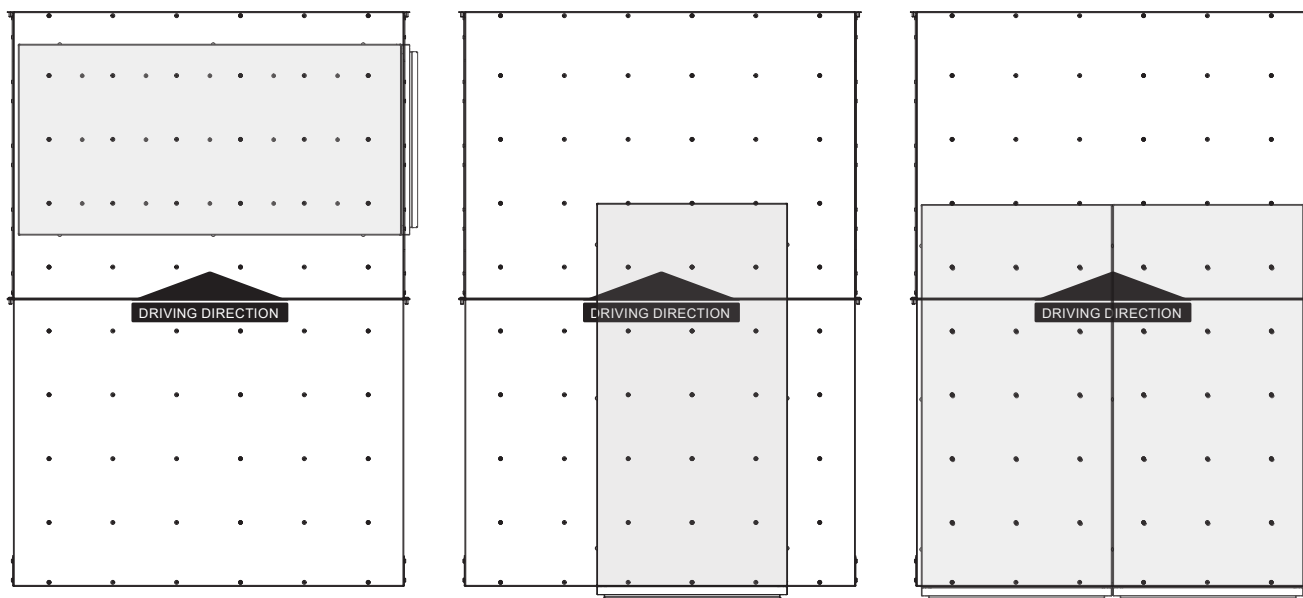


5 LIFT IN 1st DRAWER (15024662) ON PLATFORM

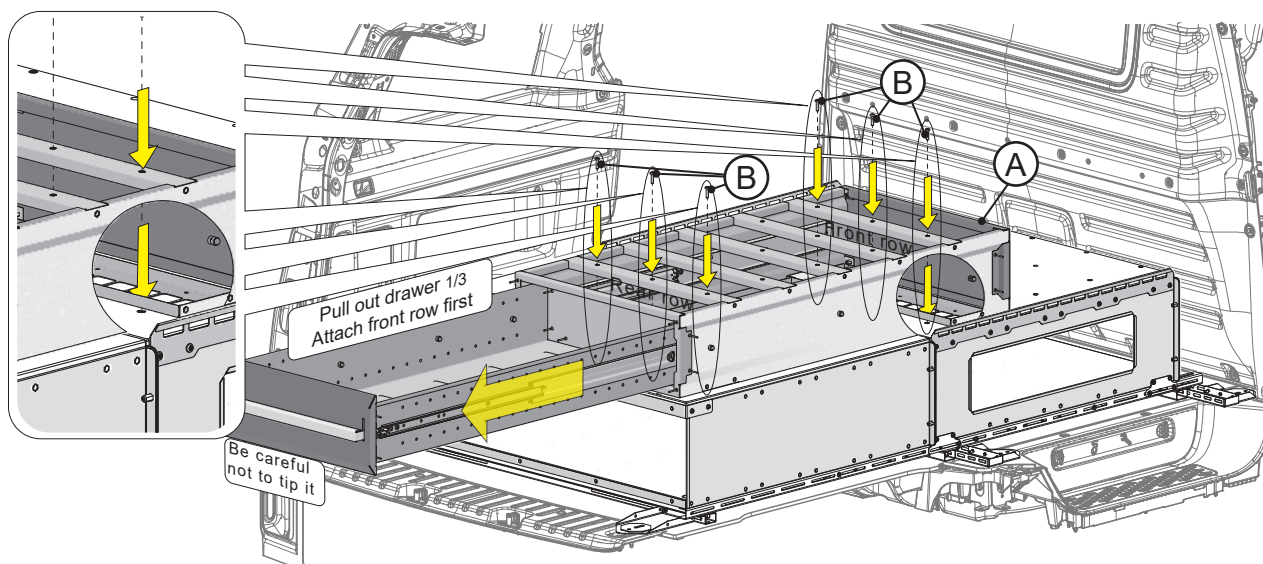



6 LIFT IN 2nd DRAWER (15024662) ON PLATFORM ASSEMBLY SAME AS 1st DRAWER (VIEW 4)

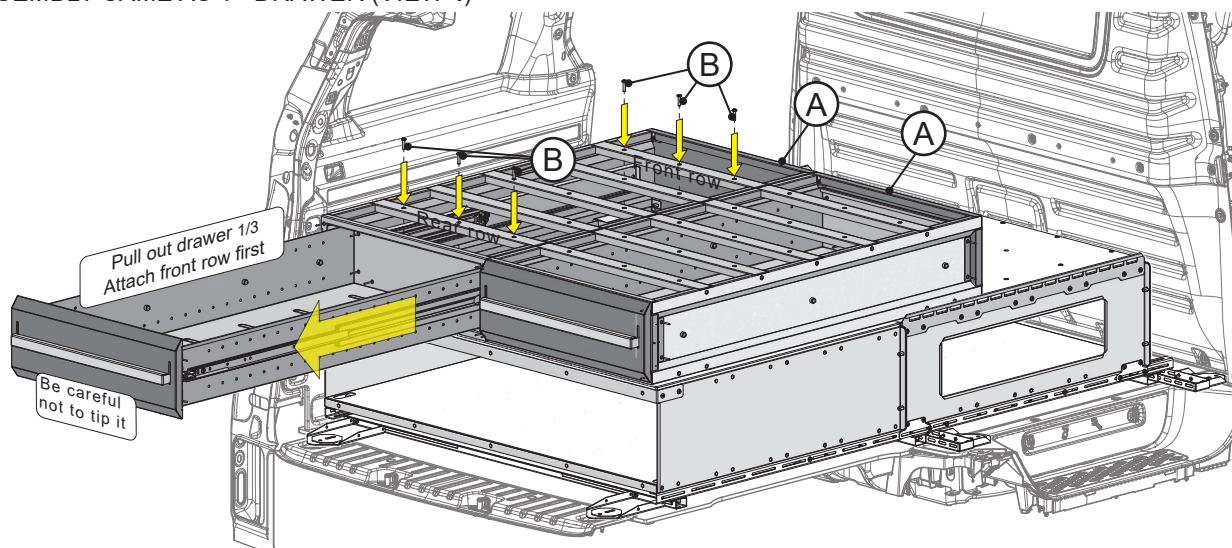


7 LIFT IN BOTH FLOORBOARDS

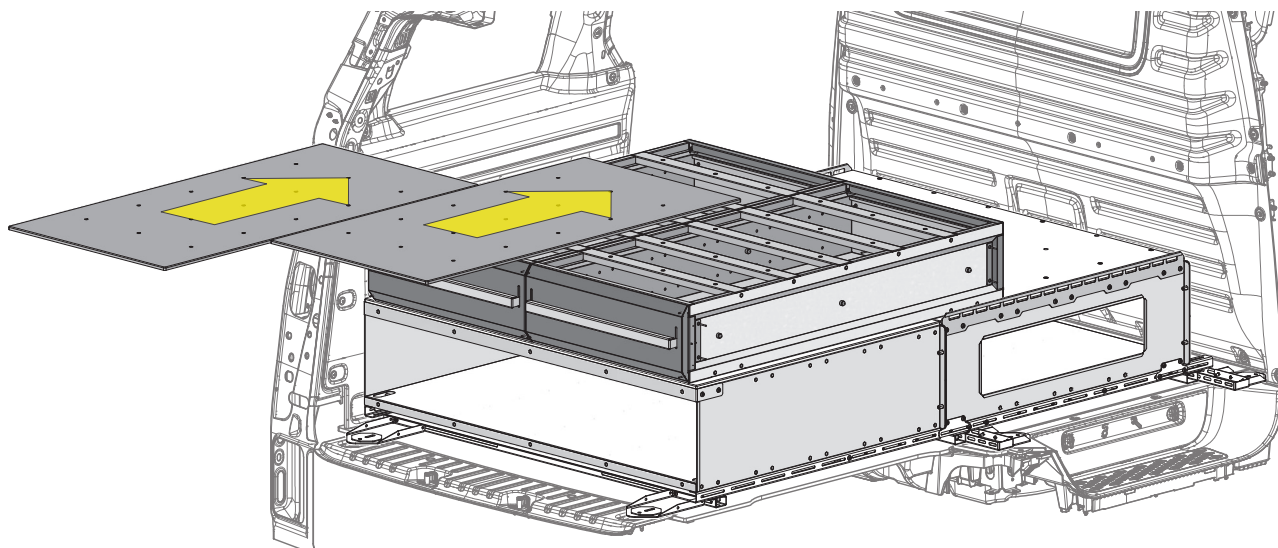


8 FASTEN BOTH FLOORBOARDS

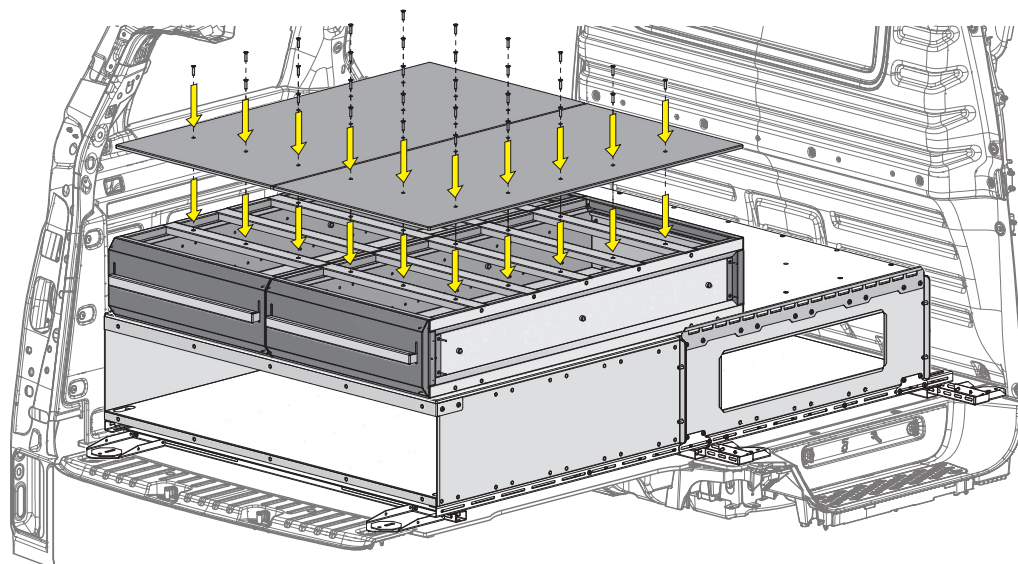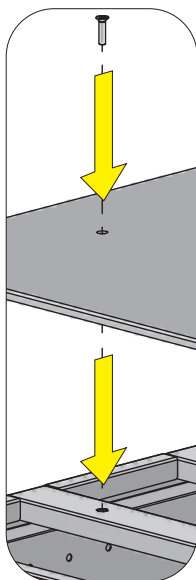

9 COMPLETED INSTALLATION OF DRAWERS

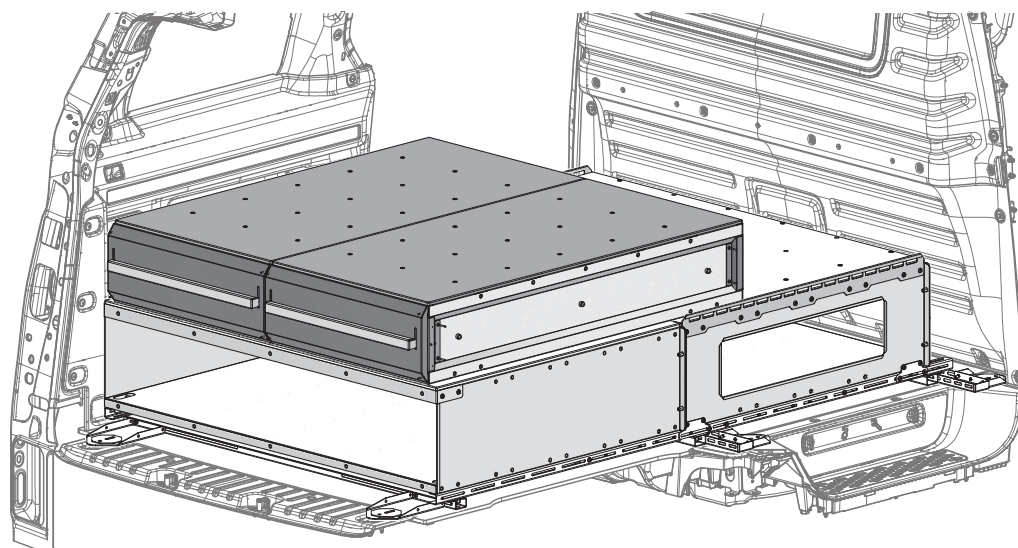

10 NEXT IS ASSEMBLY OF DRAWER

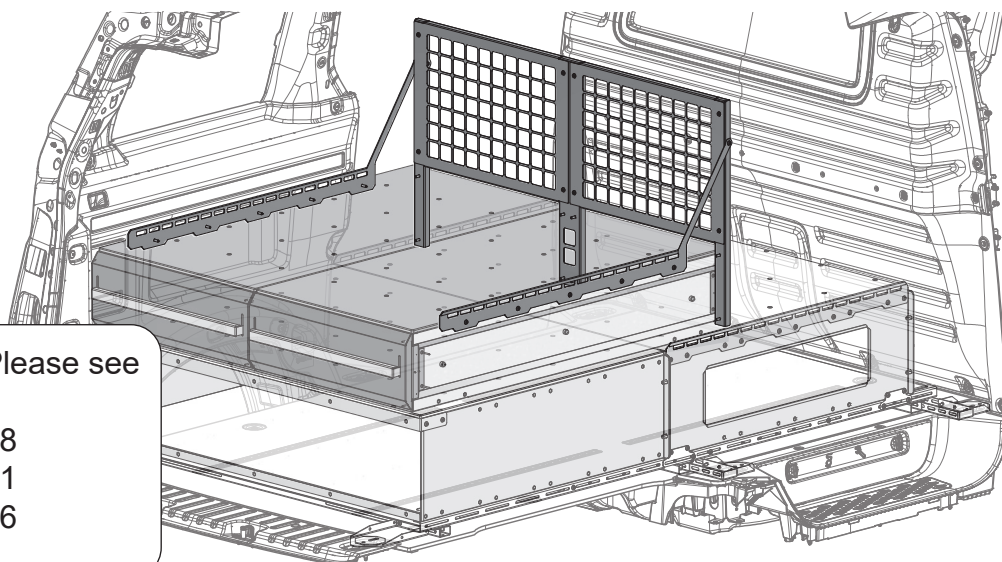

Assembly of drawer: Please see manual:

Platform: 15023388

Drawer: 15023441

Attachment: 15023446

11

12